

The Baseline Bomber will require some assembly. Prior to assembly, make sure all of the parts are included.



A (1)



B (2)



C (6)




D (12)




E (6)

**1**

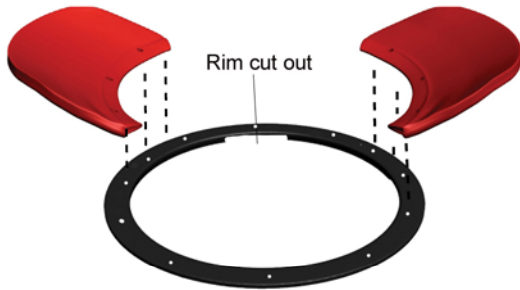


Align parts B with the holes in part A

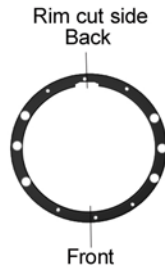

The highlighted holes on part A are the holes used to assemble your Baseline Bomber.

**2**

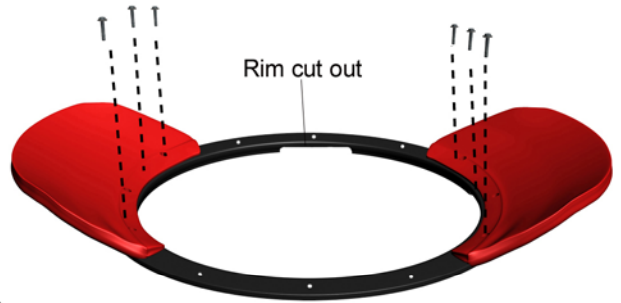

Insert the screws (E) with washers (D) into the holes provided to secure parts B




**3**

Secure screws from the underside using another washer (D) and tighten nut (C)



The pre-cut groove on the underside of part A is used in step 4 for aligning the Baseline Bomber on the rim. The groove will fit around the base of the rim

**4**

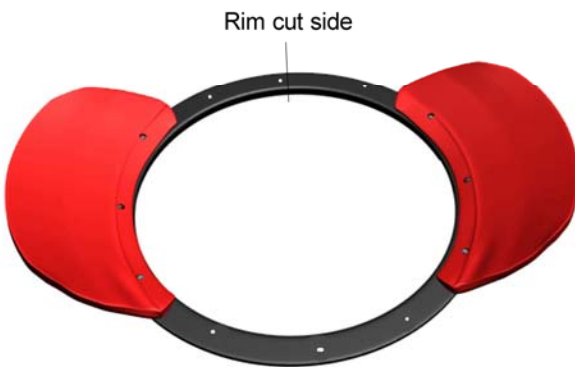

The assembly is finished! Now place the Baseline Bomber on top of any basketball rim and snap it down firmly.



Thank you for choosing success with Perfect Jumper's Baseline Bomber!

